

JOHNNYBALL®

A Product of Dirtworks Products, L.L.C.

Patent Pending

supplies needed



INSTALLATION INSTRUCTIONS

READ ALL DIRECTIONS FIRST BEFORE INSTALLING

* *Warning: Do not apply to unpainted metal - will not stick.*

(will permanently bond to painted metal, plastic or glass)



1. **Level your machine** with laser system or level surface. (level machinery differently per machine - see web site)



2. Select a mounting area on machine that is **easy to see** from a **direct downward** angle as possible. NOTE: Best to dry fit before mounting with adhesive.



*3. **Always scrub and clean** surface with cleaning pad and **prime stick** (included in your kit).




Mount plastic pivot with the two sided tape provided on the pivot. Wait 30 to 60 minutes... Let tape set up



Assemble the Johnnyball in the Base and "dry fit" the location. Pivots in contact at all times. Use the dots to line up level.



Use **PVC primer** and **heavy duty PVC glue** to ready the mounting of the Johnnyball and base cup assembly. **Use glue generously ...**

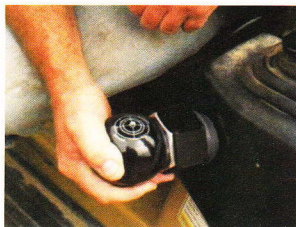

With glue in place, hold Johnnyball level so dots line up. You will have 3-4 minutes to get level before the glue sets up.

Hold Johnnyball in place until glue completely sets up...

Stop and wait...

It is always best to let the Johnnyball set a number of hours to allow proper bonding of adhesives. Over lunch hour works, but over a weekend would be better.



Go to work ...
Be efficient ...
See results ...

visit www.johnnyball.com for install help